DENVER®

CAD-391

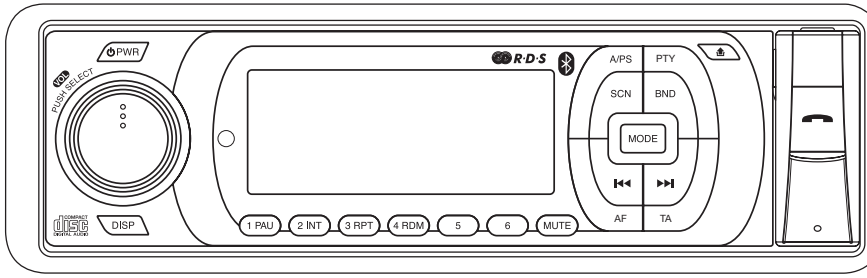

INSTRUCTION MANUAL

CAR STEREO CD/CDR/CDRW/MP3/WMA PLAYER
WITH PLL FM STEREO RADIO
RDS
BLUETOOTH FUNCTION IN MOBILE PHONE
WIRELESS BLUETOOTH HEADSET
FLIP DOWN/DETACHABLE FRONT PANEL

LOCATION OF PARTS AND CONTROLS

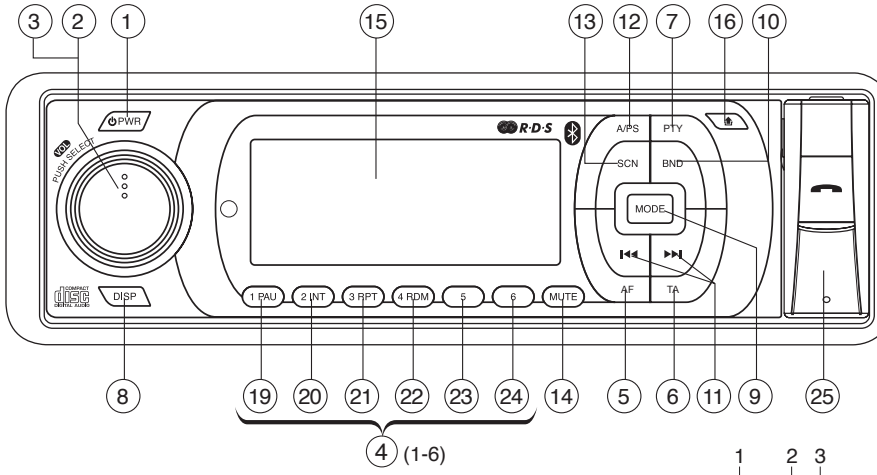

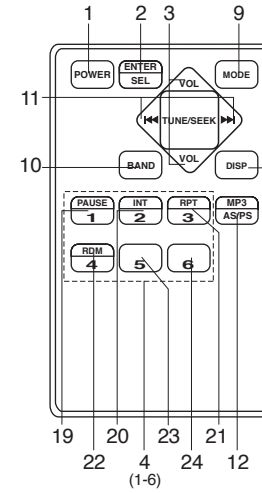

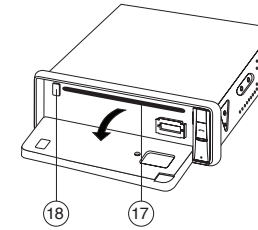

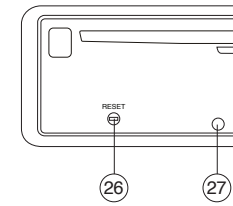

1. POWER ON/OFF (⏻)
2. FUNCTION SELECT BUTTON: BASS/TREBLE/BALANCE/ FADER / TA SEEK/MASK DPI/RETUNE/AUDIO DSP/LOUDNESS/ESP/CD MULTI/BEEP/SEEK/STEREO/LOCAL
3. VOL UP/VOL DOWN FOR BASS/TREBLE/BALANCE/ FADER / TA SEEK/MASK DPI/RETUNE/AUDIO DSP/LOUDNESS/ESP/CD MULTI/BEEP/SEEK/STEREO/LOCAL
4. PRESET STATIONS (1,2,3,4,5,6)
5. 'AF' function (ALTERNATIVE FREQUENCIES)
6. 'TA' function (TRAFFIC ANNOUNCEMENT)
7. 'PTY' function (PROGRAM TYPE)
8. DISPLAY BUTTON (DISP)
9. MODE BUTTON (MODE)
10. BAND BUTTON (BND)
11. AUTOMATIC OR MANUAL TUNING (FREQ UP ⏭ OR FREQ DOWN ⏮)/ CD TRACK/SEARCH BUTTON
12. AUTO SEEK SEARCH TUNING (A/PS)
13. 'SCAN' AUTOMATIC TUNING CONTROL (SCN)
14. MUTE BUTTON (MUTE)
15. LCD DISPLAY
16. PANEL RELEASE BUTTON (⏏)
17. CD SLOT
18. CD EJECT BUTTON (⏏)
19. PAUSE BUTTON
20. INTRO BUTTON (Preview all Tracks)
21. REPEAT BUTTON
22. RANDOM BUTTON

23, 24. + 10 TRACK SEARCH DOWN/UP

25. PORTABLE WIRELESS BLUETOOTH HEADSET
26. RESET BUTTON
27. POWER INDICATOR LED

ISO CONNECTOR

RCA Jack Line Out:
Red (right)
White (left)

RCA Jack Line In:
Red (right)
White (left)

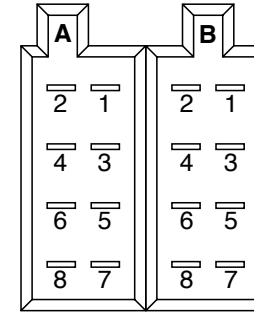

CONNECTOR A

1.
2.
3.
4. MEMORY +12V
5. AUTO ANTENNA OUTPUT
6.
7. +12V (TO IGNITION KEY)
8. GROUND

Note: (connector A no. 7) must be connected by car ignition key in order to avoid that car battery becomes weak when the car will be not used for long period.

CONNECTOR B

1. REAR RIGHT SPEAKER (+)
2. REAR RIGHT SPEAKER (-)
3. FRONT RIGHT SPEAKER (+)
4. FRONT RIGHT SPEAKER (-)
5. FRONT LEFT SPEAKER (+)
6. FRONT LEFT SPEAKER (-)
7. REAR LEFT SPEAKER (+)
8. REAR LEFT SPEAKER (-)

Maintenance

FUSE REPLACEMENT

If the fuse blows, check the power connection and replace the fuse. If the fuse blows again after the replacement, there may be an internal malfunction. In this case, consult your nearest repairing center.

Warning

Use the specified amperage fuse for each lead. Use of a higher amperage fuse may cause serious damage.

INSTALLATION

PRECAUTIONS

- Choose the mounting location carefully so that the unit will not interfere with the normal driving functions of the driver.
- Avoid installing the unit where it would be subject to high temperatures, such as from direct sunlight or hot air from the heater, or where it would be subject to dust, dirt or excessive vibration.
- Use only the supplied mounting hardware for a safe and secure installation.
- Be sure to remove the front panel before installing the unit.

NOTE : Inclination angle for car radio installation must not exceed 30˚ otherwise the front panel will not open.



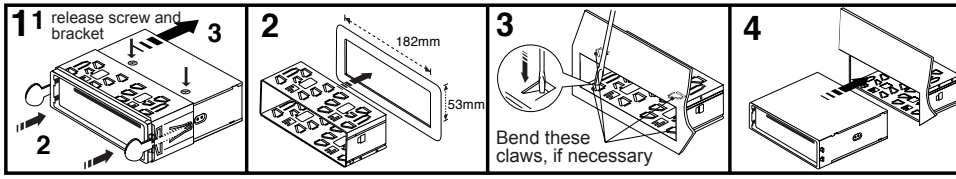

Note: Keep the release key in a safe place as you may need it in future to remove the unit from the car.

TO SUPPORT THE UNIT

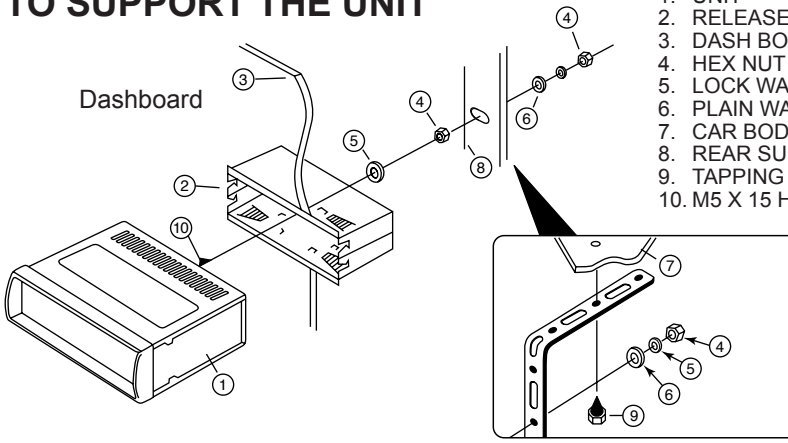

Detaching and attaching the front panel
The front panel of this unit can be detached in order to prevent the unit from being stolen.

FOLDING DOWN AND DETACHING/ATTACHING THE FRONT PANEL
Before detaching the front panel, be sure to press the ⏻ button (1) OFF first.
Then press the ⏏ button (16), let the Front Panel arrive in horizontal position and detach the panel by pulling it towards you as illustrated.

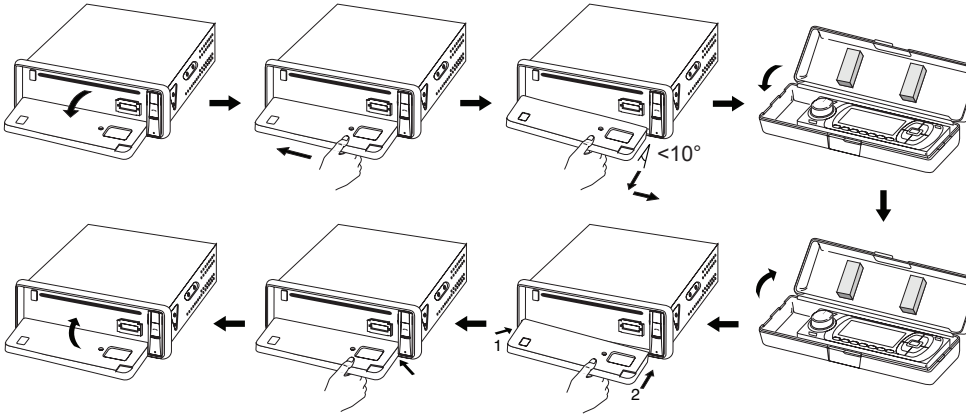

Notes:
- Do not press the front panel hard against the unit when attaching it. It can be easily attached by pressing it lightly against the unit.
- When you carry the front panel with you, put it in the supplied front panel case.
- Do not press hard or give excessive pressure to the display window of the front panel when attaching it to the unit.

1. POWER ON/OFF (⏻)

By pressing this key, the unit is on or off.
This unit is turned on by pressing any key.

2,3. FUNCTION SELECT BUTTON: BASS/TREBLE/BALANCE/FADER / TA SEEK/MASK DPI/RETUNE/AUDIO DSP/LOUDNESS/ESP/CD MULTI/BEEP/SEEK/STEREO/LOCAL (SEL)

Turning the VOL knob Right or Left (3), you can adjust VOL/BASS/TREB/BAL/FAD. To select other functions, press the VOL (3) knob shortly until the desired functions is shown on the display. Figure 1 shows how control functions are selected using the VOL knob.



Fig. 1 Selection of sound control functions

1. VOL 2. SEL 3. BAS 4. TRE 5. BAL 6. FAD

Turning the VOL knob Right or Left. Increase or decrease the volume by turning (VOL) or (VOL) . These buttons can be used to adjust the BASS, TREBLE, BALANCE and FADER.

TA SEEK/TA ALARM (2)

When press the SEL button for more than 2 seconds, it is activated as selecting mode of these function.
TA SEEK Mode or TA ALARM mode is selected by (VOL) or (VOL) .



- TA SEEK mode:

When newly turned station does not receive TP information for 5 sec., the radio retunes to next station which has not the same station (PI) as the last station, but has the TP information.
In TA seek mode, the current station can be changed to the completely different station because the unit searches TP station when the field strength of the current station is very weak, or the current station has no TP signal.

- TA ALARM mode:

Any automatic retune mode is not activated, just can hear Beep sound.

MASK DPI (2)

When press the SEL button for more than 2 seconds, it is activated as selecting mode of these function.

MASK DPI: masked only the AF which has different PI.
MASK ALL: masked the AF which has different PI and NO RDS signal with field strength.

RETUNE L / S CONTROLS (2)

When press the SEL button for more than 2 seconds, it is activated as selecting Retune mode.
RETUNE L: Select 90 seconds as the initial time of automatic TA search.
RETUNE S: Select 30 seconds as initial time.

AUDIO DSP CONTROLS (2)

When press the SEL button for more than 2 seconds, it is activated as selecting mode of these function.



LOUDNESS CONTROLS (2)

When press the SEL button for more than 2 seconds, it is activated as selecting mode of these function.



LOUD ON/OFF mode is selected by (VOL) or (VOL) . The bass and treble response will be boosted.

ESP MODE (2)
When press the SEL button for more than 2 seconds, it is activated as 12 sec. or 45 sec. of ESP mode can be selected.

MULTI CD SECTION MODE (2)
When press the SEL button for more than 2 seconds, it is activated as selecting mode of these function.

CD MULTI ON/OFF mode is selected by VOL or VOL . CD MULTI ON: Read multi section CD. CD MULTI OFF: Read first section only.

BEEP MODE (2)
When press the SEL button for more than 2 seconds, it is activated as selecting mode of these function.

BEEP ON: BEEP sound can be heard from speaker when the buttons are pressed.

SEEK MODE (2)
When press the SEL button for more than 2 seconds, it is activated as selecting mode of these function.



SEEK 1: When SEEK 1 mode is activated, AUTO SEEK SCAN is stopped when station is detected even user still push SEEK button.
SEEK 2: Auto SEEK SCAN is not stopped even station is detected if user push SEEK button. When release this SEEK button, then stop when station is detected.

STEREO/MONO (2)
When press the SEL button for more than 2 seconds, it is activated as selecting mode of these function.



When FM stations are weak and are disturbed, listening can be improved by selecting MONO.

LOCAL/DX (2)
When press the SEL button for more than 2 seconds, it is activated as selecting mode of these function.



“Local” position in areas with strong signals to let radio stop at only strong stations during manual tuning (LOC appears). Select Distant position in areas with weak signals to listen to all stations.

4. PRESET STATIONS (1,2,3,4,5,6)
(A) RADIO MODE:
When pressed shortly, these keys select a preset station directly. When pressed longer than 1 sec., current station is stored in preset memory bank. When PTY mode is selected, the PTY switch is shared as follows:
PTY music group ---- PTY speech group ---- OFF

MUSIC
1. POP M, ROCK M
2. EASY M, LIGHT M
3. CLASSICS, OTHER M
4. JAZZ, COUNTRY
5. NATION M, OLDIES
6. FOLK M

(B) CD/MP3/WMA PLAYER MODE:
1. PAUSE 2. INT 3. RPT 4. RDM

SPEECH
1. NEWS, AFFAIRS, INFO
2. SPORT, EDUCATE, DRAMA
3. CULTURE, SCIENCE, VARIED
4. WEATHER, FINANCE, CHILDREN
5. SOCIAL, RELIGION, PHONE IN
6. TRAVEL, LEISURE, DOCUMENT

USING THE RDS FUNCTION

What is RDS?

The RDS (Radio Data System) is a digital information system developed by the EBU (European Broadcast Union). Piggy-backed on normal FM broadcasts, RDS offers a variety of information services and automatic retuning functions for RDS-compatible car stereos.

In 1988, RDS became available in the United Kingdom, France, West Germany, Ireland and Sweden. Test transmissions are being conducted in many other European countries. It is expected that RDS will be available in most Western European countries in the near future.

5. 'AF/REG' function (ALTERNATIVE FREQUENCIES)

When pressed shortly, AF/REG switching mode is selected.
When AF/REG switching mode is selected, the radio checks the signal strength of the AF all the time. When pressed long, it is activated as regional mode ON/OFF.

– Regional mode ON:

AF switching or PI SEEK is implemented to the station which have all PI codes same as current station. REG segment is turned on, in LCD display.

– Regional mode OFF

The regional code in the format of PI code is ignored when AF switching or PI SEEK is implemented.

6. 'TA' function (TRAFFIC ANNOUNCEMENT)

When pressed shortly, it is activated as TA mode on or off
When TA mode is on and traffic announcement is transmitted
– When the unit is in CD/MP3 mode, it will switch to radio mode temporarily.
– If the volume level was under the threshold point, it will be raised to the threshold point.
– When TP station is received, TP segment is turned on in LCD display.

7. 'PTY' function (PROGRAM TYPE)

PTY MUSIC ---- PTY SPEECH ---- PTY OFF
While selecting PTY type, its selection is implemented by preset buttons as described in preset key. When PTY is selected, the radio starts to search corresponding PTY information, and stops if the corresponding PTY information is detected.

8. DISPLAY (DISP)

Press **DISP** button to switch between display informations such as radio frequencies, clock, track and other informations depending on the playing MODE.

9. MODE BUTTON (MODE)

By pressing this key, user can select. AUX/TUNER/CD-MP3 or BT mode.

10. BAND BUTTON (BND)

Each band is toggled cyclically by pressing this key FM1---FM2---FM3.

11. AUTOMATIC OR MANUAL TUNING (FREQ UP ⏭ OR FREQ DOWN ⏮)

(A) RADIO MODE

When pressed shortly, these keys are operated as MANUAL tuning mode.
When pressed longer than 1 sec., they are operated as SEEK tuning mode.

(B) CD/MP3/WMA PLAYER MODE

When pressed shortly, they are operated as TRACK UP or TRACK DOWN mode.
When pressed longer than 1 sec., they are operated as CUE or REVIEW mode.

12. AUTO SEEK SEARCH TUNING (A/PS)

By pressing shortly, the radio searches for each preset station.
When field strength level is bigger than the threshold level of stop level, the radio is holding at that preset number for 5 sec. with releasing mute, and then searches again.
By pressing longer than 1 sec, and then 6 strongest stations are preset to the corresponding preset number.
When AS operation is finished, the radio executes the preset scan.

13. 'SCAN' AUTOMATIC TUNING CONTROL (SCN)

This key is operated as RADIO SCAN. The operation is similar as normal search but different thing is holding 5 seconds on every station detected in RADIO SCAN mode.

14. MUTE BUTTON (MUTE)
Press this button, audio will disappear. Press this button again in order to hear audio newly.

15. LCD DISPLAY
The Liquid Crystal Display will display the current state of the unit.

16. OPEN THE FRONT PANEL
Press (⏏) button and the front panel will open.

CD/MP3/WMA CONTROL LOCATION OF PARTS

TRACK/SEARCH BUTTON (11)
FORWARD AND REVERSE TRACK SEARCH (or changing songs)
Press the SKIP button (⏮ or ⏭) during play to go to the desired track(song).
⏮ ....REVERSE ⏭ ....FORWARD
Press and hold the SKIP button (⏮ or ⏭) during play to scan the disc at high speed. When the desired music section of the disc is found, release the button. Normal play will resume.

17. CD SLOT

18. CD EJECT BUTTON
Press the ⏏ button to remove the CD.

19. PAUSE BUTTON
During “PLAY”, press (19) ‘PAU’ button to “PAUSE”. Press it again to resume play.

20. INTRO BUTTON (Preview all Tracks)
When this button is pressed, ‘INT ON’ indication is displayed and the first several seconds of each track of the disc are played. Press again to stop intro and listen to track.

21. REPEAT BUTTON
When this button is pressed, ‘RPT ON’ indication is displayed and play of the selected track will be continually repeated until the Track repeat mode is cancelled by pressing ‘RPT’ button again.

22. RANDOM BUTTON
When this button is pressed, ‘RDM ON’ indication is displayed and each track of the disc are played in random instead of normal progression. To cancel RANDOM mode, press ‘RDM’ button (21) again.

23, 24. 10 TRACK UP/DOWN SELECT: (In case of MP3/WMA files)
M5: 10 Track down / M6: 10 Track up

HOW TO SELECT MP3/WMA FILES

1. Searching Track:
- Press “A/PS”, then searching track is activated.
- Press “VOL” knob, then the first digit is blinking.
- With “VOL ↺ / VOL ↻ ” knob, select first digit you want.
- Press “VOL” knob, then the first digit is fixed and second digit is blinking.
- With “VOL ↺ / VOL ↻ ” knob, select 2’nd 3’rd respectively.
- Then automatically the song you selected will start.

2. Searching File Name:
- Press “A/PS” twice, then file search is activated.
- Press “VOL” knob, then the first directory is displayed.
- With “VOL ↺ / VOL ↻ ” knob, you can select the directory you want.
- Press “VOL” knob again, then the directory is fixed and the first file name is displayed.
- With “VOL ↺ / VOL ↻ ” knob, you can select the file you want.
- Press “VOL” knob, then the song you selected will start.

3. Searching Character:
- Press “A/PS” 3 times, then character search mode is activated.
- Press “VOL” knob, then “A” character is displayed.
- With “VOL ↺ / VOL ↻ ” knob, you can select the letter you want.
- Press “VOL” knob longer than 2 sec.
- The song which has same character you selected is displayed.
- With “VOL ↺ / VOL ↻ ” knob, you can select the song you want.
- Press “VOL” knob, then the song you selected will start.

25. WIRELESS BLUETOOTH HEADSET

HOW TO USE BLUETOOTH IN YOUR CAR AUDIO

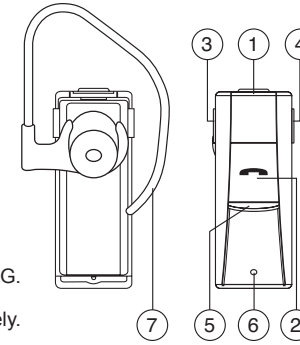

1. RELEASE BLUETOOTH HANDSET
2. ANSWER / MAKE A CALL
3. VOLUME +
4. VOLUME -
5 LED LIGHT
6. MICROPHONE
7. EAR CLIP

Before you can use the Bluetooth headset, you must first perform PAIRING. Pairing is a procedure used to connect 2 Bluetooth devices together.

1. Press and hold button until Red and Blue LED blinks alternately. This is Pairing mode stage.
2. Turn on the Bluetooth connection of the mobile phone. Perform Add Bluetooth device. The mobile will search for any Bluetooth devices within the range. Select **"BT"** and enter Passkey: "0000" to connect to the car audio. (Please refer to the instruction manual of your mobile phone for Bluetooth Pairing. Your mobile phone should have Bluetooth function otherwise can not do the pairing).
3. After successful pairing, headset's Blue LED will blink once every 3 seconds. This unit is in active mode.
4. When there's incoming call, simply press button to receive call.
5. When talking, you can adjust headset's volume level by pressing **+/-** button found at the upper left / right side of headset.
6. Press button once to end call.
7. To make calls, dial from your mobile phone. Sound automatically transfer to headset.

Note:

- *To turn on headset, press and hold until Blue LED lights on. When no device connection was found, Blue LED will blink once every 10 seconds.*
- *To turn off headset, press and hold until LED lights are off.*
- *Press 2x continously will dial the last number.*
- *"Last Number Redial" will store the last number dialled out from the mobile phone.*

CHARGING THE BLUETOOTH HEADSET

When Bluetooth headset battery state is low or out of power, attach it back to the front panel and head unit will charge it automatically. During charging, red LED lights on all the time. When fully charge, Red LED disappears.

Note: *When charging, it is advisable to let it be fully charge before detaching it from front panel for use.*

Here is a listing of current Bluetooth Mobile phones:

Nokia 3230	Nokia 6680	Samsung D508	Sony Ericsson 810C	Motorola E1
Nokia 3250	Nokia 7610	Samsung D608	Sony Ericsson K750i	Motorola E680
Nokia 5200	Nokia 8800	Samsung D800	Sony Ericsson K800i	Motorola L2
Nokia 5300	Nokia E50	Samsung D908	Sony Ericsson T610	Motorola L6
Nokia 6021	Nokia E60	Samsung E370	Sony Ericsson W810i	Motorola L7
Nokia 6103	Nokia E61	Samsung E648	Sony Ericsson Z550C	Motorola V3
Nokia 6230	Nokia E70	Samsung E870	Sony Ericsson Z710i	Motorola V3I
Nokia 6233	Nokia N70	Samsung E900		Motorola V360I
Nokia 6280	Nokia N71	Samsung P300		
Nokia 6311	Nokia N72	Samsung Z400		
Nokia 6600	Nokia N90	Samsung Z510		
Nokia 6670	Nokia N91			

26. RESET

Reset button is placed on the housing.
The reset button is to be activated for the following reason:

- Initial installation of the unit when all wiring is completed.
- All the function button do not operate.
- Error symbol on the display.

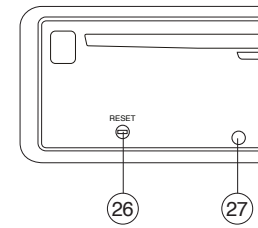

27. POWER INDICATOR LED

Flash LED when ignition is switched on.

TECHNICAL SPECIFICATIONS

CD/MP3/WMA PLAYER SECTION

Signal to Noise Ratio	> 60 dB
Channel Separation	> 50 dB (1kHz)
Frequency Response	20Hz - 20 kHz

TUNER (FM)

Frequency range	87.5-108 MHz
Intermediate frequency	10.7 MHz
Sensitivity	2.8 µV
Stereo separation	30 dB
Signal to noise ratio	50 dB
Channel step	50 kHz

LINE-OUT

Output	350mV
Impedance	10k Ohm

LINE-IN

Frequency Response	20 Hz - 20 kHz
Sensitivity	775 mV
Impedance	20k Ohm

GENERAL

Power Supply	12V DC (10.8-15.6V allowable)
Speaker impedance	4 or 8 ohm
Output power	40W x 4CH
Fuse	10A

Note: Specification and the design are subject to possible modification without notice due to improvements.

Instructions on environment protection
Do not dispose of this product in the usual household garbage at the end of its lifecycle; hand it over at a collection point for the recycling of electrical and electronic appliances. The symbol on the product, the instructions for use or the packing will inform about the methods for disposal.
The materials are recyclable as mentioned in this marking. By recycling, material recycling or other forms of re-utilization of old appliances, you are making an important contribution to protect our environment.
Please inquire at the community administration for the authorized disposal location.

ALL RIGHTS RESERVED
COPY RIGHT DENVER ELECTRONICS A/S

CE e 11 024022

www.denver-electronics.com